

# Silencer

## Series BSL

### Silencer: BSLA



Type	Connection thread R
BSLA-M5	M5
BSLA-01	R1/8
BSLA-02	R1/4
BSLA-03	R3/8
BSLA-04	R1/2
BSLA-06	R3/4
BSLA-10	R1
BSLA-15	R1½
BSLA-20	R2

### Silencer: BSLM



Type	Connection thread R
BSLM-M5	M5
BSLM-01	R1/8
BSLM-02	R1/4
BSLM-03	R3/8
BSLM-04	R1/2
BSLM-06	R3/4
BSLM-10	R1

### Silencer: BSLC



Type	Connection thread R
BSLC-01	R1/8
BSLC-02	R1/4
BSLC-03	R3/8
BSLC-04	R1/2

### Plastic silencer: BSLL



Type	Connection thread R
BSLL-01	R1/8
BSLL-02	R1/4
BSLL-03	R3/8
BSLL-04	R1/2

### Plastic silencer: BSLU



Type	Connection thread R
BSLU-01	R1/8
BSLU-02	R1/4
BSLU-03	R3/8
BSLU-04	R1/2